



heaterSteam
unprecedented precision
and reliability



Electric heater humidification

Reliable and precise technology for high-tech applications. Steam production is modulated with the highest precision, using any type of feedwater.

Electric heater humidification is the ideal solution to meet the following requirements:

- use of steam;
- exceptional relative humidity control performance (up to $\pm 1\%$);
- a functional solution that is independent of feedwater characteristics;
- service continuity.



The features of steam humidification make this technique the preferred solution in applications where the priority is hygiene, such as research laboratories or the agriculture and food industry: steam is in fact completely aseptic and does not carry solid particles, an intrinsic quality that is assured without needing to treat the feedwater.

Nonetheless, the operation of some types of isothermal humidification technology, such as immersed electrodes, is affected considerably by feedwater quality: in applications where feedwater properties are constant over time or softened water needs to be used, immersed electrode humidification is quite complex, if not impossible.

In addition to these limits, which for example prevent the use of demineralised water (useful to drastically reduce maintenance requirements), there are also technological limits in terms of the obtainable relative humidity control precision.

The CAREL solution

From water treatment to different steam distribution systems, generated by the most advanced humidifiers on the market.

Evolving technology

The air humidification technologies currently on the market have made a significant step forwards with the upgraded CAREL heaterSteam range of high-precision heater humidifiers, available in models from 2 to 80 kg/h. The product has been overhauled in every aspect, from its mechanical components to the new electronic controller with graphic interface based on the c.pCO platform. The new software functions make heaterSteam even more reliable and versatile, while its extensive connectivity allows seamless communication with any BMS system.

Steam distribution

heaterSteam can be used for humidification in the air duct, if used with the stainless steel distributors, or alternatively directly in the room, in combination with CAREL steam blowers. In the most critical applications, for maximum performance the ideal partner for heaterSteam is ultimateSAM, the high efficiency duct steam distributor: this guarantees complete steam absorption in just a few centimetres, while at the same time minimising condensate formation.

Using the special wall-mounted nozzle, heaterSteam can also be used to generate steam in steam baths.



ultimateSAM



Steam nozzles



Steam blower



Linear steam distributor

Water Treatment System

CAREL has developed a series of reverse osmosis water treatment systems designed especially for use with its range of humidifiers.

WTS is ideal for maximising the performance of heaterSteam in any application: it is available in the compact - sizes from 25 to 80 l/h - and large versions, which can deliver up to 1200 l/h.



Why use demineralised water?

- minimum maintenance, as no scale builds up inside the humidifier;
- maximum hygiene guaranteed, further assured by the UV disinfection lamp;
- compact solution, easy to install.

The heaterSteam range

heaterSteam has been completely upgraded from all points of view, with unique hardware and software functions. It is available in two versions: process and titanium.

heaterSteam process

A modular and flexible solution that represents the basis of the electric heater humidifier range.

Versatile and reliable

The ideal solution for applications requiring both reliability and operating flexibility.

The Incoloy® 825 heating elements allow operation in complex conditions, even when feedwater quality is not controlled. Integrated protection against overheating (unique on the market) and the patented Anti-Foaming System are guarantees of application reliability. The modulating limit probe prevents condensate formation without abrupt interruptions in steam production.


heaterSteam titanium

heaterSteam titanium, the world's only humidifier with titanium heaters, represents the pinnacle of this family of cutting-edge humidifiers.

Mission critical DNA

The reliability of titanium, combined with protection against overheating (unique on the market), makes heaterSteam titanium the natural solution for applications in which service continuity is crucial.

In particular, the unit can operate on any type of treated water, even extremely aggressive water with a conductivity below 1 µS/cm and softened down to 0° fH: the titanium heating elements are completely resistant to corrosion. Such ultra-pure water is often used in the pharmaceutical industry, and

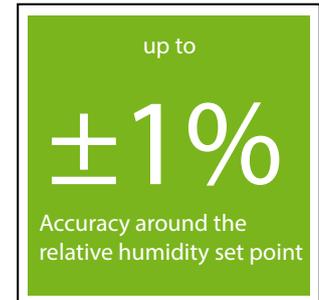

its characteristics mean it may be aggressive to the materials that are normally to construct humidifiers. In addition, the exclusive main/secondary "Endurance" function manages redundancy and rotation, guaranteeing service continuity even during maintenance.

Summary table of heaterSteam functions

Function	Process	Titanium
Heaters with thermal protection	Incoloy® 825	Titanium
Thermal shock	●	●
Main/secondary function	"Mirror"	"Endurance"
Redundancy and rotation		●
Wireless sensors		●
Web server		●
BACnet™, Modbus® and CAREL protocols	●	●
USB port	●	●
tERA ready	●	●
Preheating	●	●
Thermally insulated cylinder		●
Kevlar scale removal sack		●
Start-up wizard	●	●
Evaporation cycles before drain to dilute	40	50

Certification





Operating principle

Heat is transferred to the water via the completely immersed heating elements. The solid state relays, managed by the PWM system with built-in humidity or temperature controller, modulate the quantity of heat delivered to the water so as to precisely control steam flow-rate.

The heating elements are made from titanium or Incoloy® 825, materials that are highly corrosion resistant, and feature an embedded PTC sensor to protect against overheating, for maximum reliability.

These features mean heaterSteam is independent of feedwater quality, while ensuring very precise flow-rate modulation (up to $\pm 1\%$ RH around the set point).

CAREL c.pHC controller

The heaterSteam c.pHC electronic controller has been designed and developed by CAREL to ensure simple set-up and commissioning and exceptional performance.

The two versions of heaterSteam, while being focused on different applications, share some important basic functions, such as:

✓ Start-up wizard

Simple and fast guided configuration of the main parameters to set up the unit

✓ AFS (Anti-Foaming System)

Automatic foam management to prevent droplets being delivered in the air.

✓ Modulating limit probe

To avoid condensate formation in the duct/AHU.

✓ Thermal shock

Periodical scale removal from the heating elements.

✓ Supervision

As standard the units come with Modbus®, BACnet™ and CAREL

communication protocols available on the BMS serial port, and Modbus®, BACnet™ on the Ethernet port.

✓ Preheating

Keeps the water in the cylinder at a set temperature for instant delivery of the required steam flow-rate.

✓ Cloud based monitoring

Remote monitoring and interaction with the unit are available via the new DigitalHUM cloud portal, the plug&play solution for the remote management of humidifiers. The humidifier operating data are available at all times on the cloud, as support for maintenance and to manage and reduce operating costs. By connecting the unit to the "Cloudgate" gateway, available in the Ethernet and 4G versions, and associating the humidifier to the heaterSteam template available in DigitalHUM, monitoring is immediately available.



Control features

Continuous modulation (with SSR)	0 to 100%
Integrated control (probes not included)	RH or temperature
External proportional signal	●
Limit probe supported	●
Remote ON/OFF	●
Alarm relay	●
Type of signal (probe or external controller)	0 to 10 V; 0 to 1 V; 2 to 10 V; 0 to 20 mA; 4 to 20 mA
RS485 interface	●

- standard

EAC



heaterSteam process

The ideal solution for applications in which reliability and operating flexibility are needed when feedwater characteristics not always under control.

- Incoloy® 825 heaters;
- fast installation using the wizard;
- automatic thermal shock;
- Modbus and BACnet™ protocols on the BMS and Ethernet ports;
- USB port;
- tERA ready;
- preheating for rapid production.



More functions

The wizard makes installation simple and fast, guiding the user step-by-step through the configuration of the main parameters to get the unit up and running. Controlled-temperature thermal shock cycles, managed in complete safety by the c.PHC controller, reduce maintenance requirements and make the unit easier to clean.

Built-in USB port

The built-in USB port, available on the entire heaterSteam range, provides immediate access to several functions:

- save data log and alarm log to USB flash drive ;
- copy and paste configuration parameters from one unit to another;
- update the software directly in the field.


A versatile solution

The main/secondary “mirror” function can be used to extend installed humidifier capacity without complications. The “mirror” function in fact allows one heaterSteam process to control, via a proportional signal, up to 19 other units, expanding the system capacity up to 1600 kg/h.



Flexibility

heaterSteam process can operate in conditions in which feedwater quality is not controlled or varies over time.

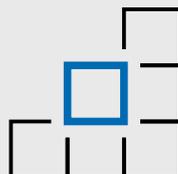

Modularity

Using the “mirror” function, humidification system capacity can be expanded up to 1600 kg/h without complications.



Simplified maintenance

Thermal shock removes any scale residues from the heating elements, thus reducing maintenance requirements.

heaterSteam titanium

The top of the range: extremely high precision, continuous humidity control modulation and unprecedented reliability.



Exclusive functions to heaterSteam titanium:

- titanium heaters;
- built-in web server;
- main/secondary “endurance” function with redundancy and rotation;
- wireless sensor reception;
- Kevlar scale removal sack;
- thermally insulated cylinder.

Accurate and precise

heaterSteam titanium is the response to applications requiring precise air relative humidity control.

When using demineralised water, the CAREL heater humidifier can provide the required humidity with an accuracy up to $\pm 1\%$.

The range of modulation from 0 to 100% of production capacity and the possibility to preheat the water in the cylinder mean heaterSteam is always ready to respond to demand for humidity.

Perfect integration

Modbus® and BACnet™ communication protocols are available as standard on both the BMS and Ethernet serial ports, without requiring optional cards. The CAREL communication protocol is available on the BMS port.

Webserver

The built-in webserver allows the entire humidification system to be configured and monitored from a PC or tablet connected to the local network, using a simple web browser.




Reliability

Rotation and redundancy guarantee service continuity even during maintenance.



Performance

Accuracy up to $\pm 1\%$ RH around the set point across a range of continuous modulation from 0 to 100%.

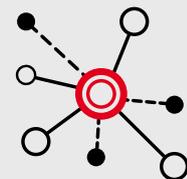

Connectivity


The Modbus® and BACnet™ protocols, available as standard without requiring additional optional cards, ensure seamless integration of heaterSteam into any system.

heaterSteam process - applications

The ideal solution for humidity control in applications that require maximum versatility

Agriculture & food industry (process and storage)


Food weight and quality are affected by the relative humidity of the surrounding air. Humidifiers are often installed in ovens to control cooking or baking processes, or alternatively are used to keep food longer, preserving its weight and features. Steam prevents solid particles from being introduced into the air.

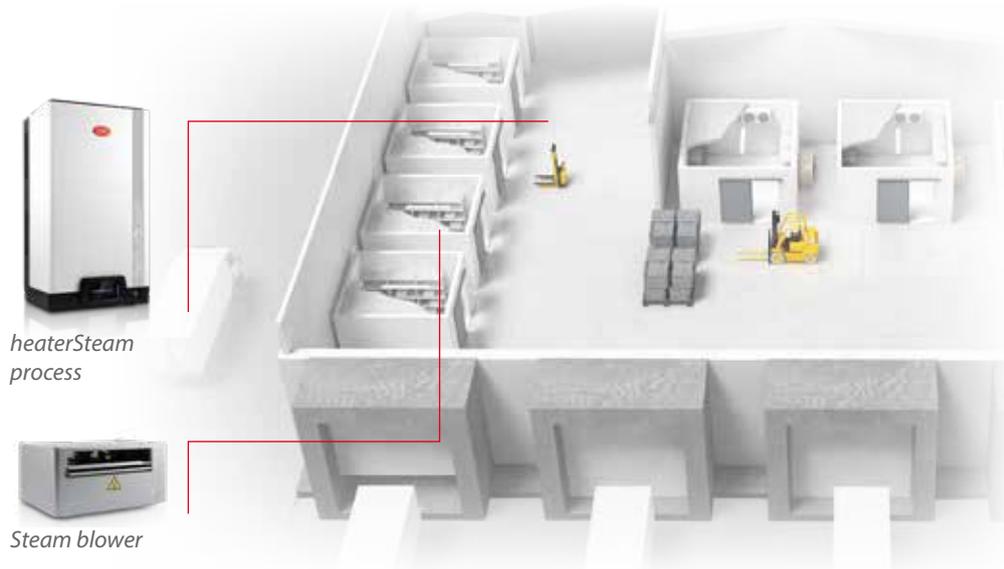

Production processes (wood, paper and printing)


The production of hygroscopic materials such as paper and wood requires relative humidity control throughout the entire process.

heaterSteam process is perfect for installations in all conditions, with the "mirror" function making the system easily adaptable when load is higher.

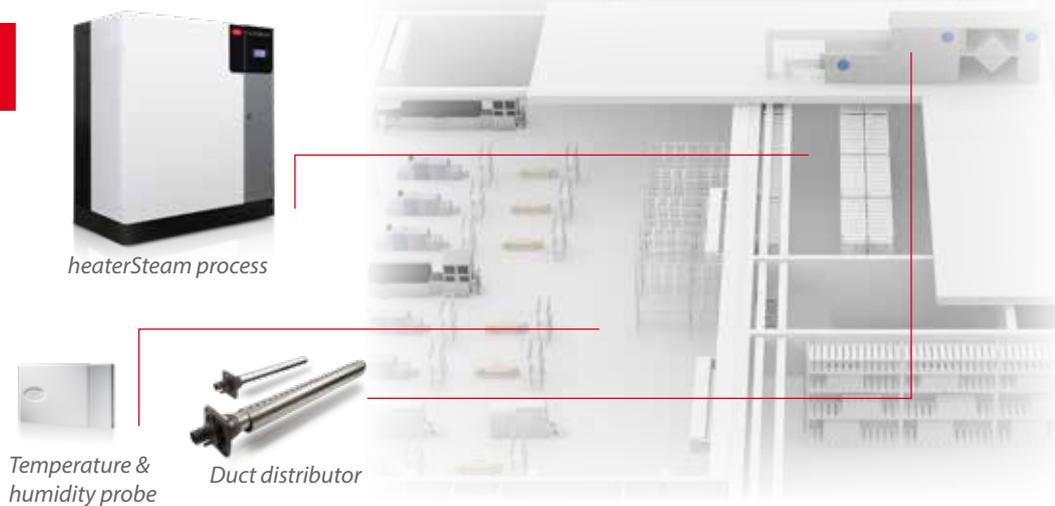

Health and comfort (shipping and residential)


In personal comfort applications, feedwater characteristics are usually not controlled: these may change significantly from city to city and may even vary over time, such as in shipping applications. For heaterSteam process this is not a problem.

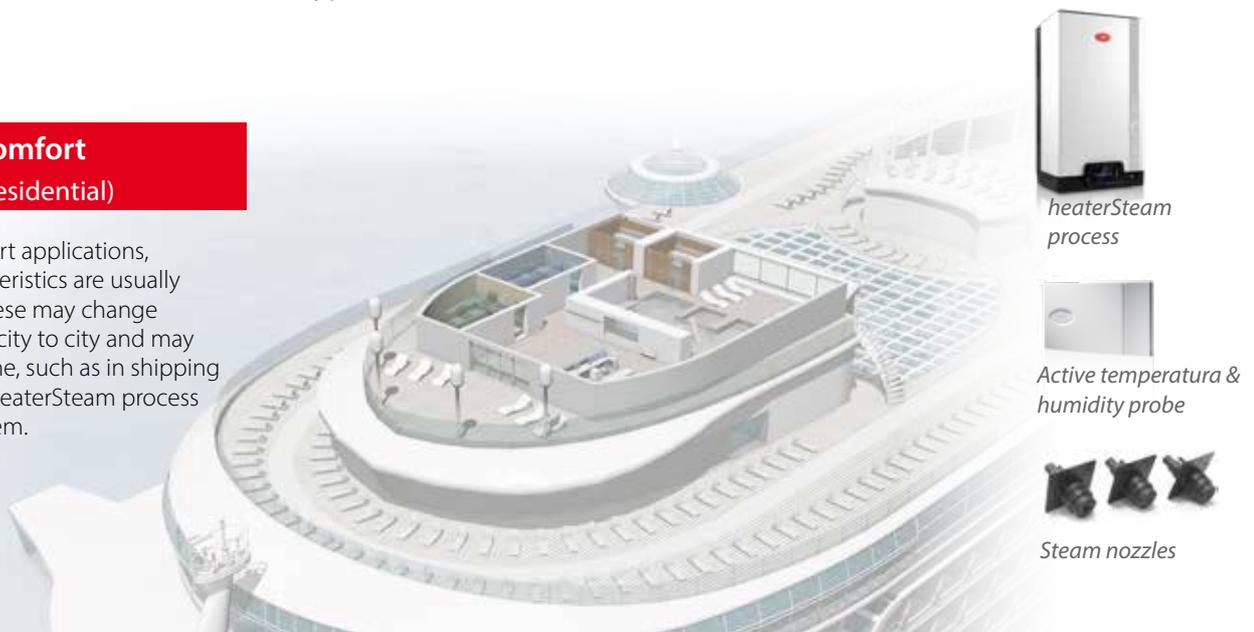

heaterSteam titanium - applications



No limits: heaterSteam titanium is the natural solution for the most demanding applications

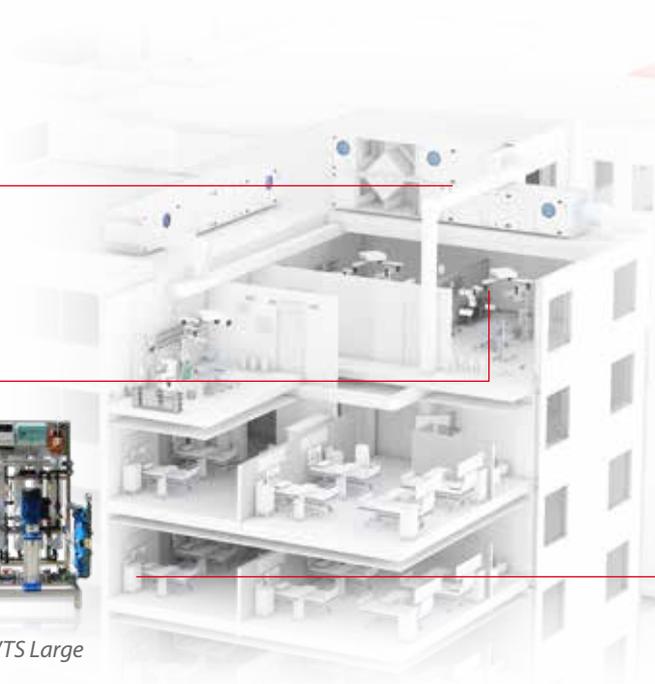

Hospitals (wards and operating theatres)

In addition to the hygiene guaranteed by steam, another essential function is the possibility of reduced maintenance requirements - in terms of frequency, complexity and duration - as well as maintenance operations that can be scheduled in advance.



ultimateSAM



heaterSteam titanium



WTS Large



heaterSteam titanium



Steam blower



Wireless probe



Museums and libraries

Artworks on hygroscopic materials, such as wood and paper, require constant temperature and relative humidity conditions. Swings in these values throughout the day may be quite considerable, as a result of factors such as the weather and the number of visitors. The humidification system must be able to be operate 24 hours a day.



heaterSteam titanium



Air quality probes

Cleanrooms and research laboratories

Precision, reliability and service continuity are the priorities in cleanrooms, where interruptions to humidity control may place the entire process at risk. Hygiene is guaranteed by steam, which is completely aseptic.



Web server



Technical specifications

Features	UR002*	UR004*	UR006*	UR010*	UR013*	UR020*	UR027*	UR040*	UR053*	UR060*	UR080*	
General												
Rated steam production - kg/h	2	4	6	10	13	20	27	40	53	60	80	
Power consumption - kW	1.6	3.3	4.7	7.4	10	15.1	20	30.5	40	45.7	60	
Power supply (other voltages upon request)	●	●	●									
• 230 Vac -15/10%, 50/60 Hz single-phase			●	●	●	●	●	●	●	●	●	
• 400 Vac -15/10%, 50/60 Hz three-phase												
Steam connection - mm	Ø 30					Ø 40			2x Ø 40			
Steam pressure - Pa	0 to 1500					0 to 2000						
Number of heaters	1	1	3	3	3	6	6	6	6	9	9	
Operating conditions	1T40 °C, 10 to 60% RH non-condensing											
Storage conditions	-10T70 °C, 5 to 95% RH non-condensing											
Degree of protection	IP20											
Certifications	CE, ETL (UL998), TÜV and EAC (GOST)											
Water fill												
Connection - mm	3/4"G male											
Temperature limits - °C	1T40											
Water pressure limits - MPa; bar	0.1 to 0.8; 1 to 8											
Instant flow-rate - l/m	1.1	1.1	1.1	1.1	1.1	4	4	4	10	10	10	
Total hardness - °fH (*)	5 to 40											
Conductivity limits - µS/cm (*)	0 to 1500											
Water drain												
Connection	Ø 40					Ø 50						
Temperature - °C	<100											
Instant flow-rate - l/m	7 (50Hz); 9 (60Hz)					17.5 (50 Hz); 22.5 (60 Hz)						
Blower												
Number	1								2			
Type	VSDU0A*					VRDXL*						
Power supply - Vac	24					230						
Rated power - W	37					120						
Rated air flow-rate - m³/h	192					576						
Network												
Network connection	Modbus RTU and TCP/IP BACnet MS/TP and IP											
Control												
Continuous modulation (with SSR)	0 to 100%											
Integrated control (probes not included)	RH or temperature											
External proportional signal	●											
Limit probe supported	●											
Remote ON/OFF	●											
Alarm relay	●											
Type of signal (probe or external controller)	0 to 10 V; 0 to 1 V; 2 to 10 V; 0 to 20 mA; 4 to 20 mA											
Supervisor (via RS485 and Ethernet)	●											

(*) heaterSteam can be supplied with completely demineralised water (0 °fH). If supplied with softened water, the minimum hardness value indicated must be observed, and the instructions described in the manual must be followed.

● standard

Functions

Features	Process	Titanium
User interface	4.3" touchscreen or LCD with 6 buttons	4.3" touchscreen
Heaters with thermal protection	Incoloy® 825	Titanium
Thermal shock	●	●
Master/slave function	"Mirror" ¹	"Endurance" ²
Redundancy and rotation		●
Wireless sensors		●
Websserver		●
BACnet™, Modbus® and CAREL protocols	●	●
USB port	●	●
Cloud-based monitoring service	● ³	● ³
Preheating	●	●
Thermally insulated cylinder		●
Kevlar scale removal sack		●
Start-up wizard	●	●
Evaporation cycles before drain to dilute	40	50 ⁵
Precision	up to ±1%	

● standard

1 Using the "mirror" function, the heaterSteam process Master humidifier can extend its capacity by managing up to 19 slave units, which faithfully replicate the status of the Master unit

2 Using the "Endurance" function, heaterSteam titanium can manage a further 19 units via Ethernet. This feature includes redundancy, rotation and maintenance functions. The latter is a major innovation: imagine an installation with three UR units, each with a capacity of 80 kg/h, during maintenance on one of the units, the other two will compensate for the momentary absence by increasing their steam production.

3 The digitalHUM remote supervision service, included, allows the user to monitor and interact with the unit from wherever they are.

4 Up to UR013

5 heaterSteam titanium, exploiting the mechanical characteristics of the heaters, is the only humidifier on the market that can reach 50 consecutive evaporation cycles without requiring a drain to dilute cycle! (The market standard is 40 cycles).

Unit code



rated instant steam production:

002= 2 kg/h
004= 4 kg/h
006= 6 kg/h
010= 10 kg/h
013= 13 kg/h
020= 20 kg/h
027= 27 kg/h
040= 40 kg/h
053= 53 kg/h
060= 60 kg/h
080= 80 kg/h

power supply:

D= 230 Vac 1~
U= 208 Vac 1~
L= 400 Vac 3~
W= 208 Vac 3~
K= 230 Vac 3~
M= 460 Vac 3~
N= 575 Vac 3~
P= 690 Vac 3~

model:

20= process Europe (touch display)
10= titanium Europe (touch display)
1U= titanium USA (touch display)
00= process Europe (LCD display)
3U= titanium USA (LCD display)
0C=process Chinese (LCD display)

NB: not all the combinations of codes are available.

Headquarters

CAREL INDUSTRIES HQs
Via dell'Industria, 11
35020 Brugine - Padova (Italy)
carel@carel.com



Authorised distributor

Arion S.r.l.

Sede operativa:
Via Pizzo Camino, 28
24060 Chiuduno (BG) - Italy
www.arionsensors.com

HygroMatik GmbH

Lise-Meitner-Straße 3
24558 Henstedt-Ulzburg - Germany
www.hygromatik.com

RECUPERATOR

Via Valfurva 13
20027 Rescaldina (MI) - Italy
www.recuperator.eu

C.R.C. S.r.l.

Via Selva di Pescarola 12/9
40131 Bologna - Italy
info@crc-srl.net
www.carel.com

Klingenburg GmbH

Brüsseler Str. 77
45968 Gladbeck - Germany
www.klingenburg.de

Sauber

Via Don Doride Bertoldi, 51
46047 Porto Mantovano (MN) - Italy
www.sauberservizi.it

ENGINIA S.r.l.

Viale Lombardia, 78
20056 Trezzo Sull'Adda (MI) - Italy
www.enginiasrl.com

Klingenburg International Sp. z o.o.

ul. Metalowców 5
PL-58-100 Świdnica, Poland
www.klingenburg.pl

Senva

1825 NW 167th Pl, Beaverton,
OR 97006, Stati Uniti
www.senvainc.com

CAREL

To the best of CAREL INDUSTRIES S.p.A. knowledge and belief, the information contained herein is accurate and reliable as of the date of publication. However, CAREL INDUSTRIES S.p.A. does not assume any liability whatsoever for the accuracy and completeness of the information presented without guarantee or responsibility of any kind and makes no representation or warranty, either expressed or implied. A number of factors may affect the performance of any products used in conjunction with user's materials all of which must be taken into account by the user in producing or using the products. The user should not assume that all necessary data for the proper evaluation of these products are contained herein and is responsible for the appropriate, safe and legal use, processing and handling of CAREL's products. The Information provided herein does not relieve the user from the responsibility of carrying out its own tests, and the user assumes all risks and liabilities related to the use of the products and/or information contained herein. © 2024 CAREL INDUSTRIES S.p.A. All rights reserved.